

JENTLE JET® LAUNDRY SINK



OWNER'S MANUAL OPERATIONS & CARE

OWNER'S MANUAL

RECOMMENDED USES

The Gentle Jet laundry sink is designed to clean delicate clothing items such as hosiery, blouses or one hand-washable sweater. Use a very small amount of low sudsing delicate washing detergent. Start with only a few drops and add more as necessary. Be advised that some delicate washing detergents foam excessively when agitated, and it may be necessary to rinse the system with clean water after use. The sink may also be used without the whirlpool action as a utility sink for general household functions. We DO NOT recommend that the Gentle Jet Laundry Sink be used for cleaning or soaking unusually dirty, greasy or clay-ridden clothing items, household tools or other items that may damage the inner plumbing system or pump. The sink is not designed to replace the washing machine—DO NOT overfill with clothing. MTI does not recommend the bathing of small pets or infants in the sink.

**DO NOT RUN PUMP UNLESS WATER IS FILLED UP ABOVE THE JETS.
UNDERMOUNTING APPLICATION NOT RECOMMENDED.**

OPERATING INSTRUCTIONS

The Gentle Jet laundry sink is installed with a deck mounted on/off control, eliminating the need for an external switch, although the installer may provide one. Water pressure in the Gentle Jet may be adjusted from a very high agitation to a low, swirling action. Turn the deck mounted three-speed control to vary the pressure.

JENTLE JET LAUNDRY SINK CARE AND CLEANING

The Lucite® cast acrylic surface of this sink is among the glossiest, most durable surfaces available. Its hard, non-porous surface prevents dirt from accumulating and resists stains better than other materials. With normal use, Lucite cast acrylic will retain its beauty with only a minimal amount of care. To maintain the high gloss, elegant look of the Lucite cast acrylic surface, follow these simple steps:

1. Use common household, **non-abrasive** cleaners for most cleaning jobs (for example: a mild dishwashing detergent such as Ivory Liquid). Follow manufacturer's directions and precautions. Rinse well and dry with a soft, clean cloth. Be sure to check the product label. Some products, although not containing abrasives, WILL damage the acrylic over time. Never use any type of "scrubbing bubbles" on your acrylic product unless it specifically states that it is safe for use on acrylic!
2. Never use abrasive cleansers. If any product feels gritty when rubbed between your fingers, do not use on the acrylic surface or controls as permanent damage will occur.
3. Do not allow your Lucite cast acrylic surface to come in contact with products such as acetone (nail polish remover), nail polish, dry cleaning solution, lacquer thinners, gasoline, pine oil, wintergreen oil, etc.
4. Remove dust and dry dirt with a soft, clean cloth.
5. Clean grease, oil, paint or ink stains with isopropyl (rubbing) alcohol. Dry with a soft, clean cloth.
6. Avoid using razor blades or other sharp objects that might scratch the surface. Small scratches may be removed by applying a thin coat of automotive paste wax and buffing lightly with a clean cloth. For deeper scratches, sand the surface lightly with a 400 grit "wet or dry" paper and buff with a fine grit buffing compound.
7. Periodically clean the filter (located behind the suction cover). MTI recommends cleaning the filter monthly or anytime you notice a decrease in the whirlpool action. To do this, simply remove the suction cover, carefully remove screen (edges may be sharp), rinse screen and replace.