

JENTLE PED® FOOT SPA



OWNER'S MANUAL
OPERATIONS & CARE

OWNER'S MANUAL

FOOT SPA USE

The Gentle Ped Foot Spa is recommended for soothing foot baths and hydrotherapy foot massage. Use the raised bar in the spa bottom to exercise the arch and plantar areas of the foot.

CAUTION: Be careful when using products containing acetone, including nail polish and polish remover, in or near the Gentle Ped. Acetone will damage the acrylic surface and void the warranty.

DO NOT RUN PUMP UNLESS WATER IS FILLED UP ABOVE THE JETS.

UNDERMOUNTING APPLICATION NOT RECOMMENDED.

PLEASE NOTE: When using the foot spa, care should be taken not to allow such debris as nail clippings or epithelial tissue to drop into the foot bath. These should be captured outside of the bath and properly disposed of.

OPERATING YOUR FOOT SPA

1. Close the drain.
2. Fill foot spa with water to completely cover the jets. **IMPORTANT:** Water must completely cover jets. Failure to do so may damage the pump or internal seals and could void warranty. Check water temperature before placing feet in water.
3. Activate on/off control to start pump.
4. Water pressure in the foot spa may be adjusted from a very high-pressure massage to a low, relaxing current by turning the air volume control.
5. After the footbath is finished, drain and clean.

FOOT SPA CARE AND CLEANING

CLEANING YOUR FOOT SPA

The whirlpool system must be cleaned periodically:

For commercial use — after each customer and again at the end of the day.

For residential use — at least once every 30 days.

Do not exceed 90 days between cleanings.

If your foot spa is not equipped with the Fill-Flush system, skip to next section.

FILL-FLUSH® CLEANING SYSTEM OPERATING INSTRUCTIONS

1. After completely draining the foot spa, close all jets by simply twisting the jet nozzle.
2. Open detergent filler cap and pour in ONE of the following: 2 oz. MTI Fresh Wave cleaning solution OR 1 cup white vinegar OR several drops of a low sudsing detergent mixed with one cup warm water.
3. Turn on water. Do not turn on pump.
4. This allows water to mix with the cleaning solution, circulating through the air line, water line and pump.
5. Residue will be flushed out the suction intake and down the drain. **NOTE:** it is normal for some water to exit around the jets and through the jet nozzles.
6. Let water run for 2-3 minutes. Open jets and allow fresh water to rinse through jets for 30 seconds. Turn off the water and allow remaining water to flow out of the jets.

CLEANING INSTRUCTIONS FOR FOOT SPAS NOT EQUIPPED WITH FILL-FLUSH

1. Fill foot spa with warm water 2" above highest jet and add ONE of the following: 2 oz. MTI Fresh Wave cleaning solution OR 1 cup white vinegar OR several drops of a low sudsing detergent mixed with one cup warm water.
2. Turn the pump on for five minutes and let stand an additional 15 minutes.
3. Drain the tub and refill with cold, fresh water.
4. Run the pump for 2-3 minutes, then drain.

CLEANING INSTRUCTIONS FOR THE ACRYLIC SHELL

The Lucite® cast acrylic surface of this foot spa is among the glossiest, most durable surfaces available. Its hard, non-porous surface prevents dirt from accumulating and resists stains better than other materials. With normal use, cast acrylic will retain its beauty with only a minimal amount of care. To maintain the high gloss, elegant look of the acrylic surface, follow these simple steps:

1. Use common household, non-abrasive cleaners for most cleaning jobs (for example: a mild dishwashing detergent such as Ivory Liquid). Follow manufacturer's directions and precautions. Rinse well and dry with a soft, clean cloth. Be sure to check the product label. Some products, although not containing abrasives, WILL damage the acrylic over time. **Never use any type of "scrubbing bubbles" on your acrylic product unless it specifically states that it is safe for use on acrylic!**
2. Never use abrasive cleansers. If any product feels gritty when rubbed between your fingers, do not use on the acrylic surface or controls as permanent damage will occur.
3. Do not allow your cast acrylic to come into direct contact with nail polish, nail polish remover, Wintergreen oil, dry cleaning solution, lacquer thinners, gasoline, pine oil, etc.
4. Remove dust and dirt with a soft, damp cloth.
5. Avoid using razor blades or other sharp objects that may scratch the surface. Small scratches can be removed by applying a thin coat of automotive paste wax and buffing lightly with a clean cloth. For deeper scratches, sand the surface lightly with a 400 grit "wet or dry" paper and buff with a fine grit buffing compound.

NOTE: MTI strongly recommends a professional acrylic repair company for deep scratches or chips.